


iAMT EC strapping need to check

Note:
EXT_SMI#, EXT_SCI#, PU power plane
depend on ICH9/GPIO.

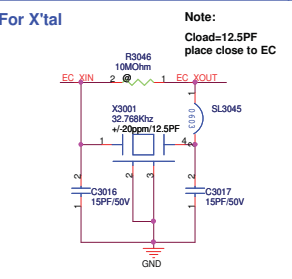

For EC Hardware Strap

I/O Base Address
Note: It can be programmable by EC firmware

Share Memory
Note: It can be programmable by EC firmware.

PP Enable
Note: Default Int. Pull-Low

R3045: For Xtal measurement

For iAMT pin name

AC_PRESENT
PM_S4_STATE#
S4_STATE_ON
PM_SLP_M#
SLP_M_ON
EC_WLAN_PWR
MFP_PWRGD
AC_PRESENT
LAN_WOL_EN
+3VBI_PG
+1.5VM_+3VMCK_PG
SUSPWR_ACK

