Service Manual Acer 10R R827 1000p/50 C813 C805 T801 EER28 5uH L802 R804 —≫+16V D801 UL4-06 ZD802 470u/25V C817 C804 150u/420V 68R 1/2W R808 470K R816 100R 1W D804 UFF80-015CT 10R 1000p/500V R828 C814 P6KE150A ZD803 12V 200R R817 C815 1000u/25V C806 4700p/400V Q801 2PC1815GR D805 R809 470K MUR1100ERL 5uH L803 F802 -√--->> vccsv 6 4A/125V SRF1045CM C807 47u/25V 1000u/10V 1000u/10V 12p/1KV C826 L801 20mH AP27611 N C818 C819 C808 100p/1KV R812 10K FB801 6.0mm R801 1M R802 1M Q803 C823 R822 5K11% R819 1K NC/ PM5T39064700p/400V R810 470K R806 10R 1K R821 ZD804 NC / 14V 1K R813 C803 0.47/275V R823 47K 1% R820 1K C821 0.1/100V R805 0R18 2W IC801 LTV817M D806 1N4148 NC / 200 R824 3K 1% A 3K IC803 TLV431ALP C827 47u/25V DRV GND 3 Vcc CS 2 NC FB 1 2200p/250V 2200p/250V F801 R814 NC/1K 2.5A/250V R815 12K 1% C812 C810 0.1/50V CN801 P801 AC_SKT VOL 7

BRIGHTNESS 6

ON/OFF 6 TO SCALER BD CN101 C825 60mm 8P InnoLux VG2021m Document Number : SIZE: APPRO BY: Custom TITLE: CHECK BY: Power Supply SCH DATE: 2006-12-15 DRAWN BY: Rev: V01 OF SHEET 5